

LEXO POWERTECH PR4 REMOTE




Note: The PR4 remote comes standard with a battery saver switch found on the right side of the remote. Turn this on before attempting to program this remote.



Programming to a LEXO RD1P1000A/ RD1P1800A Roller Door

- ON MOTOR: Press and Hold on "CODE" button for 1 second, until the LED dot is on.
- ON NEW REMOTE: Press button you wish to activate the opener once, LED dot will go off
- ON NEW REMOTE: Press same button again, LED dot will flash fast 8 times and then return to standby mode.

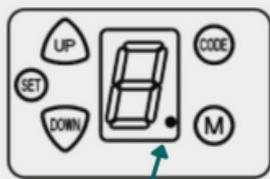

Turns on



Turns off



Flashes * 8 times

Deleting ALL remotes




ON MOTOR: Press and Hold the "CODE" button for more than 8 seconds, LED flashes "C".

Programming to a Powertech COBBLE Overhead, Sliding Gate or Swing Gate

- ON MOTOR: Press "RF Learn" button for three (3) seconds , LED display shows "CS"
- ON NEW REMOTE: Press button you wish to activate the opener once, LED display will blink three times then turn off after approx. 7 seconds.

Cobble: RF button is found inside the Light Fixture

Gate: RF button is found on the control board below the LED display

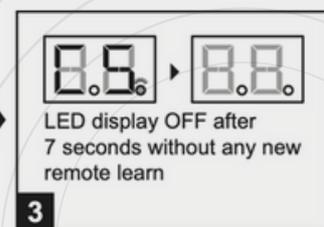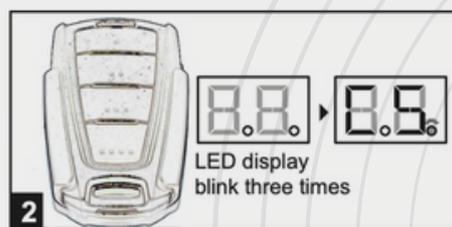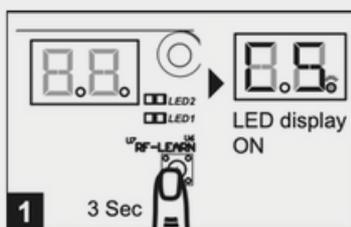

Deleting ALL remotes

- ON MOTOR: Press and Hold the "RF Learn" button until the right LED lights up and then turns off, LED display shows "C"