

# ATA PTX4 v2 REMOTE

## CODING INSTRUCTIONS

---



### CODING USING A WORKING REMOTE

1. Take any coded remote. Press the button for the function you require until the door / gate is activated and release.
2. Then using a small needle or paper clip press through the Coding Hole and hold firmly for two seconds – LED lights.
3. Within 10 seconds pick up the new remote you wish to code.
4. Press the remote button you would like to use to open / close the device for two seconds.
5. Pause for two seconds then press the same button again for two seconds - button should now be coded.
6. Wait for 10 seconds, then press the just coded remoter button to confirm that it operates the device.

### CODING DIRECT TO A RECEIVER

1. Press and hold the blue “Door Code” button on the opener or SW1 MAIN or SW2 PED on the receiver board.
2. Press the remote button you would like to open / close the device for two seconds.
3. Release and pause for two seconds. Press the same button again for two seconds.
4. Release the Door Code or SW button.
5. Press the transmitter button to test operation of the door or gate etc.

### DELETING ANY REMOTE ALREADY CODED

Coding a button again will delete it from memory.

### DELETING ALL STORED TRANSMITTER CODES

1. Turn the power off to the opener.
2. Press and hold Door Code or SW1 button.
3. Turn the power on again, while holding the button. The coding LED will illuminate to indicate that the receiver’s memory has been deleted.
4. Release the button. All the stored codes including the courtesy light codes should now be all deleted.

Confirm this by pressing the transmitters previously used to operate the device, there should be no response.



CODING INSTRUCTIONS FOR ATA PTX4 v2 REMOTE

[www.retroremotes.com.au](http://www.retroremotes.com.au)

0417223200