

# B&D TRI-TRAN TB6 REMOTE

## CODING INSTRUCTIONS

---



### CODING THE REMOTE

Up to fourteen (14) codes can be stored in the receiver's memory.

Press the CODE SET button and release.

The CODE SET LED will illuminate to indicate the opener is in Code Learn mode. If a valid code is not stored within 15 seconds the opener will exit.

Press the remote button that you want to open / close the door.

The CODE SET LED will begin to flash.

Press the same remote button again.

The CODE SET LED will illuminate for one second and then go out.

The remote is now coded to operate the door – press the button to test.

### CODING THE LIGHT

Although the courtesy light comes on with each operation of the opener, it may also be controlled by a transmitter without operating the door.

Press the CODE SET button twice.

The CODE SET LED will illuminate and the courtesy light will turn on to indicate that the light code learning is active.

Choose a remote button not already coded into the receiver.

Press this button and the CODE SET LED will begin to flash.

Press the same remote button again.

The CODE SET LED will illuminate for one second and then go out.

The transmitter is now coded to operate the light – press the button to test.

### DELETING CODES

If the CODE SET button is pressed and held for 6 seconds the CODE SET LED will blink rapidly for one second to indicate that all codes have been erased.



CODING INSTRUCTIONS FOR B&D TRI-TRAN TB6 REMOTE

[www.retroremotes.com.au](http://www.retroremotes.com.au)

0417223200