

BOSS HT3 RED LED REMOTE CODING INSTRUCTIONS



CODING HT3 REMOTE TO MOTOR

1. Remove the face plate of the motor to locate the radio set button. The radio set button is generally yellow but the colour may vary depending on your motor model.
2. Press the radio set button on your motor once and release. A light will illuminate on your motor.
3. Press and hold the button on the new remote until the light on the motor goes out.

Your remote is now programmed. Please push the button on the remote to test.

NOTE – If your remote LED is **Blue** – you need the **HT4 remote**. This version will not work.