

# CHAMBERLAIN 4335A REMOTE

## CODING INSTRUCTIONS

---



### CODING A REMOTE

1. Press and hold the selected remote push button you wish to open the door.
2. Press and release the orange or green "learn" button on the opener panel. The opener light will flash once. Release the remote push button. If no light bulb is installed, two clicks will be heard. If you release the remote control push button before the opener light flashes, the opener has not accepted the code.

### DELETE CODES

Press and hold the "learn" button on the opener panel until the indicator light turns off (about 6-10 seconds).

Note: This procedure erases ALL codes from the operators memory.

