

ELSEMA KEY 302 10 SWITCH REMOTE CODING INSTRUCTIONS



CODING THE REMOTE – ELSEMA KEY 302

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote

CODING THE RECEIVER – ELSEMA KEY 302

Set the RECEIVER code as per 1-10 on a working ELSEMA remote + switch 11 and 12 as shown. Button A or 1 - Switch 11 is transmitted as “ON” (DIP switch 11 = UP) Button B or 2 - Switch 11 is transmitted as “OFF” (DIP switch 11 = DOWN) BUTTON B code can be changed by cutting the link Wire link is connected - switch 12 is “ON” (DIP switch 12 = ON) Wire link is cut - switch 12 is “OFF” (DIP switch 12 = OFF)





CODING INSTRUCTIONS FOR ELSEMA KEY 302 – 10 SWITCH REMOTE

www.retroremotes.com.au

0417223200