

## ET DOORS TX4 REMOTE

### CODING INSTRUCTIONS

---

#### ROLLERDOOR OPERATOR

The operator should be under standby mode when coding transmitters.

1. Open the semi-transparent cover and press K1 button, the coding light will be on and the operator is under transmitter learning mode.
2. Press any button on the transmitter, the coding light will be off.
3. Press the same button again the coding light will flash for 8 times then off. The transmitter has been coded successfully.



The same way to code other transmitters.

1. Press the K1 button and hold on for over 8 seconds the coding light will be off, all storage will be cleared.
2. Press the K1 button and release within 8 seconds.

If the coding light flash and then off, it means the memory is full. The operator can learn 20 transmitters at most.

#### SECTIONAL OVERHEAD & TILTADOOR OPERATOR

1. Press 'CODE' button and hold on until the LED dot is on. (Fig. A) Press any button (except the lock button) on the transmitter once, the dot will be off;
2. Press the button again the dot will fast flash then LED displays '11' (Fig. B). After that the transmitter will be available.
3. Press 'CODE' button more than 8 seconds until the LED displays 'C', all the stored codes will be deleted.

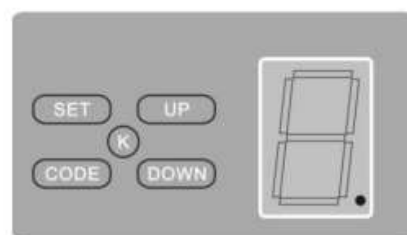


Fig. A

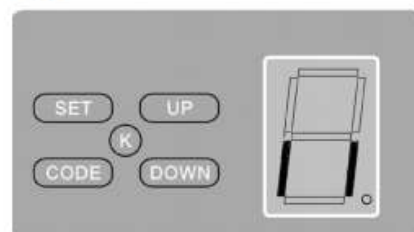


Fig. B