

FADINI ASTRO 43-2 REMOTE

CODING INSTRUCTIONS

There are two methods for programming your new remote control

REMOTE-TO-REMOTE PROGRAMMING:

1. Open the casing of your already-programmed & working remote.
2. You will see a row of small programmable numbered switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in your already-programmed remote.
6. Your new remote control is programmed.

RECEIVER-BASED PROGRAMMING:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of small programmable switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in the receiver.
6. Your new remote control is programmed.

REMARKS:

Please note: Certain remote controls contain one or two pair of supplementary internal programmable switches which are separate from the main row. These switches must also be set in the same position as those found in the remote control that is already programmed. - If this method does not work, retry by reversing the positions of the small programmable switches with regard to the receiver or to your already-programmed remote control.

