

DITEC GOL4 REMOTE

CODING INSTRUCTIONS





CODING USING AN EXISTING CODED REMOTE

1. Next to your receiver, activate with an already coded remote control.
2. With a sharply pointed object (Paper Clip or Pin), press the hidden button. Keep it pressed down for 5 seconds. LED illuminates. Let go of the button
3. Press a button on your new remote control you want to open your device.
4. Wait 10 seconds for system reset. 5. Your new remote control is programmed.

DIRECT TO THE RECEIVER

1. Open the casing of your receiver.
2. On the receiver circuit board, press the programming button (PRG). The receiver illuminates. Let the button go.
3. Press a button on your new remote control. Receiver blinks and then remains lit fixed
4. Your new remote control is programmed.

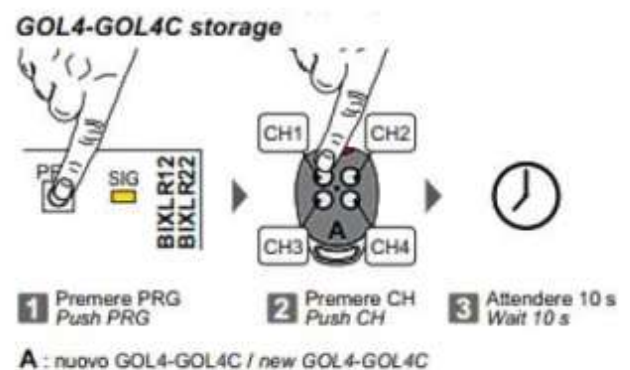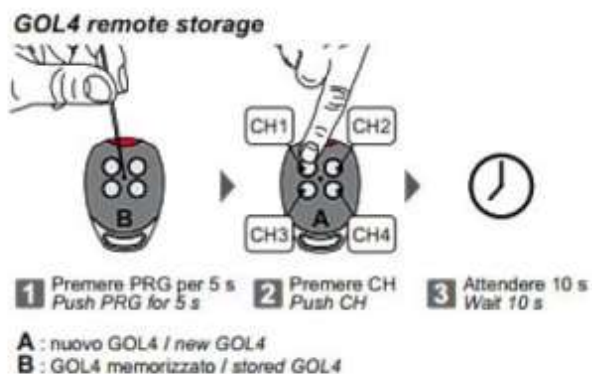



CODING INSTRUCTIONS FOR DITEC GOL4 REMOTE

www.retroremotes.com.au

0417223200