

## ACDC GREEN BUTTON REMOTE

### CODING INSTRUCTIONS

---



#### ACDC ROLLER-GLIDE

Remove the white plastic light cover – be aware of the push button as it is attached - Press and release LEARN button - Press the remote button you want to open / close the device for 2 seconds - Pause for 2 seconds - Press the same button again for 2 seconds

DELETING REMOTES - Press and hold the LEARN button for 15 seconds.

#### ACDC POWER-GLIDE & EURO-GLIDE

Press and release LEARN button - A dot will illuminate in the corner of the LED display - Press the remote button you wish to open /close this device for 2 seconds - Pause for 2 seconds - Press the same button again for 2 seconds - The dot in the corner of the display will flash to confirm the code has been accepted - then turn off.

#### ACDC SLIM-GLIDE

Remove the light cover. Press K1 button on the control board, the coding light will come on. Press the remote button you wish to open / close the device for 2 seconds –coding light will turn off - pause for 2 seconds - Press the same button again for 2 seconds - The coding light will flash 8 times then turn off indicating the coding has been coded successfully.

DELETING REMOTES - Press and hold button K1 down for approximately 8-10 seconds - code light will come on and then go off indicating a successful delete.

#### ACDC GL24

Press and hold down button "P2" MEMO: The LED "L4" will flash slowly - at the same time press the remote button you want to open / close the device - Hold down button "P2" MEMO until LED "L4" starts to flash again - Release the button "P2" MEMO - The LED will continue to flash. Within 15 seconds activate the remote button again – at the end of coding: the LED "L4" will remain lit for 2 seconds - the remote button has been accepted.

DELETING REMOTES - Keep both buttons "P2 & P3" pressed down for more than four seconds.- LED "L4" will remain lit during the entire delete time (about 8 seconds) - LED "L4" switches off when the deletion procedure has finished