

AVANTI EURO STYLE 2 REMOTE

CODING INSTRUCTIONS



TX4 & STYLE REMOTES CODE LEARNING

1. If needed hinge the Courtesy Lamp Cover open to expose the "Learn or Code Set Button otherwise it is on the rear of the motor head as shown.
2. Decide which button of the new remote will control the opener
3. Momentarily press the "Learn or Code Set Button (* LED Indicator will glow solid)
4. Momentarily press the New Remote button you want to control the door - LED indicator will extinguish
5. Momentarily press the same Remote button again - LED indicator will begin to flash rapidly, programming is complete once the LED Indicator ceases to flash
6. If required close the Courtesy Lamp Cover

CODE DELETING

1. If needed hinge the Courtesy Lamp Cover open to expose the "Learn or Code Set Button otherwise it is on the rear of the motor head.
2. Momentarily press the "Learn or Code Set" Button - LED indicator will glow solid
3. Press and hold the black "Run" Button - LED indicator will begin to flash rapidly
4. All Remote Codes will have been deleted once the LED Indicator ceases to flash
5. If required close the Courtesy Lamp Cover

EURO STYLE REMOTE CODE LEARNING

1. With the door closed - On the control box momentarily press red learn button and LED light will flash.
2. Use the yellow + Button to scroll through to run function on the display screen menu. If 10 seconds elapses before step 3, start again at step 1.
3. Momentarily press button on handset you wish to open / close the door. Led light will flash rapidly indicating successful coding. Australia's widest range at great prices Web Site - www.retro-remotes.com - Call - 0417 223 200 If you have more than one automatic door, please repeat the same process using selected button on additional handset.
4. Code learning complete.

CODING LEARNING VIA MENU

1. On control box momentarily press Red learn button and LED light will flash.
2. Use the Yellow + Button to scroll through to li function on the display screen menu. If 10 seconds elapses before step 2, start again at step 1.
3. Momentarily press button on handset you wish to code to operate the Light. LED light will flash rapidly which indicates successful coding of the courtesy light function.

CODE DELETING

1. Press Red LEARN button on opener once. The LED will display bu and the light will slowly flash for 10 seconds. If 10 seconds elapses before step 2, start again at step 1.
2. Hold green CONFIRM button down for 5 seconds until led light on the opener flashes rapidly.
3. Deleting codes complete.