

REMOTE CODING INSTRUCTIONS



BFT MITTO 2b & 4b – BFT MITTO 2 & 4

PLEASE NOTE – Some versions of the BFT MITTO 2 & 4 remotes do not have a hidden button - Press both buttons 1 & 2 at the same time.

Code Ezy HORIZON Compatible – to access hidden button function press buttons 3 & 4 together (nearest keychain).

CODING VIA EXISTING CODED REMOTE

Locate a remote already coded to & working the device.
Be within 3 meters of the gate control box

Original Remote: Press hidden button on back of remote with a pin or paper clip OR press Button 1 & 2 together until remote LED lights.

Original Remote: Momentarily press button that opens device

This puts the device receiver into learning Mode

New Remote: Press hidden button on back of remote with a pin or paper-clip or press buttons 1 & 2 together until remote LED lights.

This teaches the receiver the additional code to remember

CODING VIA RECEIVER LCD SCREEN

At least one Remote must be already coded to device.

Screen has 3 buttons to the right of the screen
Top + / Middle - / Bottom OK

Press OK Button twice to enter menu parameters (PArAn)
Press - Button twice to scroll down to Radio (RADio)
Press OK Button - Menu shows Add Start (StArt)
Press OK Button - Menu says Hidden Button

New Remote - Press hidden button on back of the remote with a paper-clip or press Buttons 1 & 2 together – menu shows Desired Button

Press the button you want to operate device – menu shows OK & number of remotes coded

To exit program press buttons + & - together 3 times.

PLEASE NOTE - Some equipment supplied by selected stockiest may be totally electronically programmed. The receiver will only pair with transmitters that have been coded with this device. If you cannot code the remotes, then they must be programmed by a BFT supplier using a special computer-based programming tool.