

BOSS DIGI-CODE 5070 REMOTE CODING INSTRUCTIONS

Both of these brands are electronically the same.

MULTI-CODE Switches = UP for ON

DIGI-CODE Switches = DOWN for



CODING FOR MULTI-CODE 3083 & DIGI-CODE 5070

Opening the working remote will reveal two x 10 switch banks (L/H Bank = L/H Button) on the circuit board. Duplicate these sequences exactly Multi-Code to Multi-Code or upside down Multi-Code to Digi-Code.

If no working remote is available look to the receivers on the two openers themselves - remove the inspection panels to reveal the switch settings. This will mainly be a Multi-code receiver.

Code the LEFT HAND button switch bank to the LEFT HAND Door looking in from the street.



CODING INSTRUCTIONS FOR BOSS DIGI-CODE 5070 REMOTE

www.retroremotes.com.au

0417223200