

MULTI-CODE 3060 REMOTE

CODING INSTRUCTIONS



Note: Multi-Code and Digi-Code remotes work on opposite systems.

MULTI-CODE switches – UP for ON

DIGI-CODE switches – DOWN for ON

Opening the working remote will reveal a 10 switch bank on the circuit board.

CODING A MULTI-CODE using an existing MULTI-CODE remote

Duplicate this sequence exactly Multi-Code to Multi-Code

CODING A MULTI-CODE using an existing DIGI-CODE remote

Duplicate this sequence but upside down. If DIGI-CODE shows UP mark it DOWN on Multi-code remote.

CODING A MULTI-CODE with no available remote

If no working remote is available look to the receiver on the opener itself - remove the inspection panel to reveal the switch settings. This will mainly be a Multi-code receiver. Follow the steps above remembering if it is a Multi-code receiver you will need to duplicate to opposite positions.