

MULTI-CODE 3083 REMOTE

CODING INSTRUCTIONS



Note: Multi-Code and Digi-Code remotes work on opposite systems.

MULTI-CODE switches – UP for ON

DIGI-CODE switches – DOWN for ON

Opening the working remote will reveal two x 10 switch banks (L/H Bank = L/H Button) on the circuit board.

CODING A MULTI-CODE using an existing MULTI-CODE remote

Duplicate this sequence exactly Multi-Code to Multi-Code

CODING A MULTI-CODE using an existing DIGI-CODE remote

Duplicate this sequence but upside down. If DIGI-CODE shows UP mark it DOWN on Multi-code remote.

CODING A MULTI-CODE with no available remote

If no working remote is available look to the receivers on the two openers themselves - remove the inspection panels to reveal the switch settings. This will mainly be a Multi-code receiver. Code the LEFT HAND button switch bank to the LEFT HAND Door looking in from the street.