

RIB SUN REMOTE

CODING INSTRUCTIONS



CODING

The codes can be programmed only when the gate is stationary.

1. RECEIVER- set DIP 1 to ON and then DIP 3 to ON.
Programming two-colour led DL10 flashes green for 10 seconds.
2. REMOTE - Press the remote control button (normally channel B) within the pre-set 10 seconds.
If the remote control has been saved correctly, two-tone led DL1 turns red for an instant, and a buzzer tone confirms the saved entry.
The 10 seconds for programming the codes are reset automatically with two-tone led DL10 that flashes green to save the next remote control.
3. To finish programming, let the 10 sec pass or press briefly the PROG. button. Programming led DL10 stops flashing.
4. RECEIVER - Reset DIP 1 to OFF and DIP 3 to OFF. 5 - End of sequence.

MAX 1000 Codes