



ACDC

CLEAR CASE – HEAVY METAL – GREEN
BUTTON – RED BUTTON – CLOVER LEAF

SPECIFICATIONS

Frequency: 433.92Mhz
Battery: 27A
Code: Rolling Code
Body Type: Key Ring
Range: more than 40m

FEATURES

4 Channels/Buttons


COMPATIBILITY LIST

These remotes are not interchangeable. You must match the motor to the remote.

Heavy Metal Compatible with:



Red Button Compatible with:
Also Called Napoleon Red Button, ET Doors Red Button and ET Doors TX4

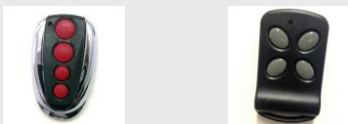

Green Button Compatible with:



ACDC ROLLER-GLIDE

1. Remove the white plastic light cover (take care as the push button is attached).
2. Press and Release LEARN button
3. Press the button on the NEW remote for 2 seconds.
4. Pause for 2 seconds
5. Press the same button again for 2 seconds

DELETING REMOTES - Press and hold the LEARN button for 15 seconds.

ACDC POWER-GLIDE & EURO-GLIDE

1. Press and release LEARN button
A dot will illuminate in the corner of the LED display
2. Press the button on the NEW remote for 2 seconds.
3. Pause for 2 seconds
4. Press the same button again for 2 seconds
The dot in the corner of the display will flash to confirm the code has been accepted
5. Turn off Motor.

ACDC SLIM-GLIDE

1. Remove the light cover.
2. Press K1 button on the control board, the coding light will come on.
3. Press the button on the NEW remote for 2 seconds.
Coding light will turn off
4. Pause for 2 seconds
5. Press the same button again for 2 seconds
The coding light will flash 8 times then turn off indicating the coding has been coded successfully.

DELETING REMOTES - Press and hold button K1 down for approximately 8-10 seconds - code light will come on and then go off indicating a successful delete.

ACDC GL24

1. Press and hold down button "P2" MEMO: The LED "L4" will flash slowly - at the same time press the remote button you want to open / close the device
2. Hold down button "P2" MEMO until LED "L4" starts to flash again
3. Release the button "P2" MEMO - The LED will continue to flash.
4. Within 15 seconds activate the remote button again - at the end of coding: the LED "L4" will remain lit for 2 seconds

DELETING REMOTES - Keep both buttons "P2 & P3" pressed down for more than four seconds.- LED "L4" will remain lit during the entire delete time (about 8 seconds) - LED "L4" switches off when the deletion procedure has finished