

DEA ZIGGY GT2 REMOTE

CODING INSTRUCTIONS



RECEIVER WITH NO LCD SCREEN

1. Open the casing of your receiver box. It can be found next to your motor.
2. Press the programming button on the circuit board of the receiver and then let it go (button ENR, MEMO, PROG, or RESET, depending on the model).
3. The LED light on the receiver lights up or blinks.
4. Press a button on your new remote control for 1 second.
5. Let the button go. The LED light on the receiver goes out immediately or in the following 10 seconds depending on the model.
6. Your new remote control is programmed.

Repeat for more remotes.

RECEIVER WITH A DIGITAL SCREEN

1. Open the casing of your receiver box. It can be found next to your motor.
2. Press the buttons + or – on the receiver circuit board until you see the entry P005 on the digital screen.
3. Press OK. The LED lights up.
4. Press a button on your new remote control for 1 second
5. Wait 10 seconds.
6. Your new remote control is programmed.

Repeat for more remotes.

DELETING REMOTES

Press the programming button on the circuit board of the receiver for 8 to 10 seconds and then let it go (button ENR, MEMO, PROG, or RESET, depending on the model). All remotes are now deleted.