

CODE EZY ELECTRA REMOTE

CODING INSTRUCTIONS



CODING THE NEW REMOTE

1. Reset the operator, (ie, disconnect and reconnect power).
2. Look for the PROGRAM Button on the opener & press it twice - after several seconds all lights will flash - LED 1 will light or flash

IF ILLUMINATED - A code has already been stored into this slot.

3. Keep pressing the PROGRAM button to cycle through to the next vacant memory slot indicated by flashing LED's.

IF FLASHING - Depress & hold the transmitter button until the LED stops flashing and stays illuminated.

4. Code has now been stored in memory
5. Repeat for any extra transmitters or return to the reset mode by either waiting 10 seconds Up to 10 transmitters may be stored in memory.

TO DELETE CODES

1. Turn off power to the unit for 20 seconds
2. Press program button twice
3. After several seconds all lights will flash - LED 1 will light - PRESS & HOLD program button until LED flashes - Code in slot 1 has been wiped - press program button once to move to slot 2 & repeat until all slots are deleted.