

MARANTEC 433 D382 REMOTE

CODING INSTRUCTIONS



CODING YOUR 433.92 or 868MHz REMOTE


Each transmitter comes factory programmed with random codes on each button that must be changed in order to match the code of the “active” remote which you are already using.

Connect the remote with active code to the new remote using the coding connector (Fig 49 below)

Press and hold the selected channel button on the remote with the active code

Press and hold the respective channel button on the new remote. The light in the remote initially starts blinking and then illuminates continuously after 1-2 sec. Code transfer is completed.

NOTE: For multi-button transmitters, be sure to carry out this procedure for all the buttons you desire to use. Programming connector can be removed and both remotes can now be used to operate the same opener.

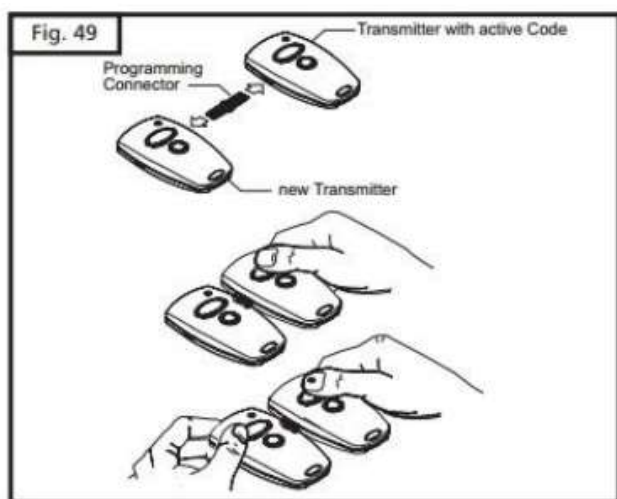

LOST YOUR REMOTE? OR RESETTING CODE

The remote factory preset code can be changed as follows -

Insert the coding connector into remote.

Short one of the outer pins of the coding connector with the middle pin

Press and hold the respective channel button - The light will blink rapidly for 5 sec

Release the button after the light illuminates continuously.

Remove the programming connector - Code will change in approximately 2 seconds - Release button after the light illuminates continuously. Code further remotes as above