

CODE EZY DEVON REMOTE

CODING INSTRUCTIONS

LOCATING THE LEARN BUTTON

SECTIONAL / TILT DOORS

The motor head is 3m inside the garage on the ceiling - undo 2 screws on the rear of the cover & it will hinge down exposing the grey receiver box. Undo bolt to free box.



ROLLER DOORS

Newer versions have 3 holes on the rear of the wall mounted control box. Lift off the holding screws & reverse exposing a hole each for a push button & two LED's (green & orange).

Older units have the receiver inside the control box - unplug both leads & remove from the holding screws - lay on a flat surface & undo the 4 screws - lift the lid off & invert - wires connect both parts. Plug back into a power source, be aware that although protected it is live.

CODING YOUR REMOTE

1. Open the window located on the receiver & expose the Learn button - on the side of the receiver are 3 x LED's Red (always on when powered) Green & Yellow.
2. Press the Learn button, after a time the Yellow LED will light - you are in coding mode.
3. Press the button on the new remote you want to activate this device - Green LED will FLASH release button - Press button a 2nd time.
4. If successful Green LED will be steady for 2 seconds - wait 8 to 10 seconds for Yellow LED to go out - end of procedure - you have coded your remote.
5. Replace widow & all screws & return opener to normal operation & test - Some receivers reset on first try. Repeat as required

DELETING CODES

1. Power down the opener.
2. Press Learn button while powering up the system
3. After 5 seconds 2nd red LED will light to confirm deletion.