

CODE EZY MITTO REMOTE

CODING INSTRUCTIONS



CODING VIA AN EXISTING REMOTE

Locate a Remote already coded to device - Be within 3m of the gate control box

Original Remote:

1. Press hidden button on back of remote with a pin or paper clip or press B1 & B2 together until remote LED lights
2. Momentarily press button that opens device

New Remote:

1. Press hidden button on back of remote with a pin or paper-clip or press B1 & B2 together until remote LED lights
2. Press the button on the NEW REMOTE you want to operate device.
3. Wait for device to reset & test

Repeat for as many remotes required

PLEASE NOTE – Some versions of the BFT MITTO 2 & 4 remotes do not have a hidden button . In this instance- Press both buttons 1 & 2 at the same time

CODING VIA RECEIVER LCD SCREEN

PLEASE NOTE: At least one Remote must be already coded to device

1. Press Red Button 3 Twice
2. Press Red Button 2 to scroll down to the Radio (RADio) menu item
3. Press OK Red Button 3 menu shows Start
4. Press OK Red Button 3
5. Menu says Hidden Button Coded Remote
6. Press hidden button on back with a pin or paper-clip or press B1 & B2 together New Remote
7. Press B1 & B2 together until remote LED lights
8. Menu = Released
9. Then Press the desired button on the New Remote you want to open / close the device until menu says OK.
10. Menu moves to add
11. Press OK Red Button 3
12. Repeat for further remotes Or, Press Red Button 1 & 2 buttons together to end

Note: Some equipment supplied by selected stockist may be totally electronically programmed. The receiver will only pair with transmitters that have been coded with this device. If you cannot code the remotes, then they must be programmed by a BFT supplier using a special computer based programming tool.