



### CODE EZY MULTI RECEIVER

**IMPORTANT NOTE** - Select 12v or 24v AC or DC via the jumper pins located next to the POWER terminals.  
Prongs 1 & 2 = 12v - Prongs 2 & 3 = 24v


Set the 8 DIP Switches

ATA PTX5 = 3 ON  
B&D TRI-TRAN = 3 ON  
MERLIN+ = 3-7 ON  
BFT MITTO - NICE SMILO - SEIP 433 - MHOUSE = 5 ON  
ATA PTX4 - HERCULIFT - AVANTI - CENTURION -  
SUPERLIFT = 5 ON  
GLIDEROL TM305C = 4 ON  
FAAC 433 = 6-8 ON  
FAAC 868 = 4-5-6-7 ON

MARANTEC 433 = 7 ON  
MARANTEC 868 = 7-8 ON  
NICE ERA INTI 2 - FLOR-S 1, 2 & 4 = 8 ON  
UNIVERSAL 390 = 5-6-7 ON  
UNIVERSAL 300 = 5-8 ON  
UNIVERSAL 310 = 5-7 ON  
UNIVERSAL 318 = 5-6 ON  
UNIVERSAL 330 = 5-6-8 ON  
UNIVERSAL 433 = 6 ON

#### How to enter & erase all remotes

- 1 - First select the brand name & set 8 x DIP switches to suit
- 2 - Press Ch1 or Ch2 learn button Press button on remote until LED flashes 4 times 3-4 Seconds)
- 3 - Repeat 2 for additional remotes
- 4 - To erase all remotes press either learn button - LED flashes - hold until LED turns off - all remotes are totally erased

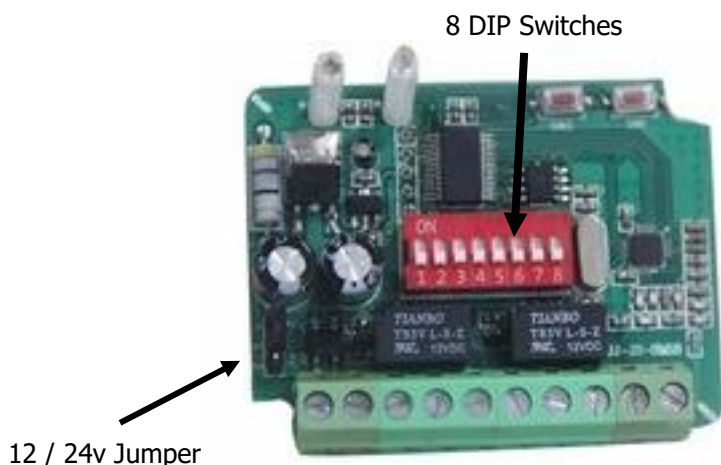

Terminals Right to Left

- 1 - Power Active
- 2 - Power Negative
- 3 - Ch1 NO
- 4 - Ch1 COM
- 5 - Ch1 NC
- 6 - Ch2 NO
- 7 - Ch2 COM
- 8 - Ch2 NC
- 9 - Antenna Ground
- 10 - Antenna

To make a 3-Wire System, Active - Negative - Switch Wire. Install a Link wire from Negative to Ch1 COM - Switch wire goes to CH1 NO - Power wires as normal.