

CODE EZY MYHOUSE REMOTE

CODING INSTRUCTIONS



CODING YOUR REMOTE TO GATE ONLY

1. Hold down the top, right button (P1 BUTTON) until the LED lights up (3 seconds) then release the button WITHIN 5 SECONDS
2. Hold down any button on the remote until the LED LIGHT on the Control Card flashes 3 times (About 4 Seconds), then release
3. When the LED LIGHT goes out on the Control Card, the programming is complete.
4. Repeat for all others remotes.

CODING YOUR REMOTE TO GATE AND GARAGE

In Mode 2 each button requires coding individually

1. If the transmitter to be coded is already incorrectly such as Mode 1 the remote must be deleted
2. Press key P1 on the control unit twice.
3. Check that LED P1 flashes quickly three times.
4. Within 10s press the required button on the radio transmitter for at least 2s to code it. If the coding procedure is successful, the LED P1 will emit 3 slow flashes.
5. If there are other transmitters to be coded for the same type of command, repeat step 03 within the next 10s otherwise the coding phase end automatically.

REPEAT FOR AUXILLARY RECEIVER IN GARAGE USING A DIFFERENT BUTTON

DELETING CODES

1. Press & hold the P1 BUTTON on the CONTROL CARD.
2. Wait until the LED lights up, then wait until it goes off, then wait until it has flashed 3 times.
3. Release the P1 BUTTON precisely upon the third flash.
4. Wait approximately 4 seconds for the deletion to be completed; during this time the LED LIGHT will flash very quickly
5. Test REMOTE, they shouldn't work