

CODE EZY SILVER REMOTE

CODING INSTRUCTIONS

Remotes must be 433.92MHz

CODING YOUR REMOTE

1. Stand next to your garage/gate motor
2. Remove the electrical casing/motor cover off of the motor – you will see part of the control board
3. Press and hold the RED LEARN BUTTON on the right hand side of the control board for about 5 seconds, until the courtesy light starts flashing. This indicates that your receiver is in learn mode.
4. Press and hold one of the buttons on your new remote for 3-4 seconds until the lights stop flashing
5. Test your new remote.



DELETING CODES

1. Stand next to your garage/gate motor
2. Unscrew motor casing. The screw is located at the back of the cover, in the centre. The casing will hang down
3. You will now be able to see the green circuit board
4. Press and hold the learn button for 15 seconds 5. Release the learn button

ALL REMOTES ARE DELETED