

NICE VERY BLUE REMOTE

CODING INSTRUCTIONS

CODING YOUR REMOTE

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of 10 small programmable switches (R1), numbered 1 to 10. They are in the ON or OFF position (fig 1). The positioning of these small programmable switches determines the system code. Please make a note of these positions in the following table :

1°	2°	3°	4°	5°	6°	7°	8°	9°	10°

3. Press both buttons on your new remote control at the same time. Keep them pressed down. The LED light on your new remote control illuminates. Let the buttons go.
4. Enter your programming code in the following manner : - the top button of the remote control corresponds to the ON position of the internal programmable switches (fig2) - The bottom button of the remote control corresponds to the OFF position of the internal programmable switches
5. As you set the position of the last switch, The LED light on your new remote control blinks fast and then turns off.
6. Wait 10 seconds.
7. Your new remote is coded.

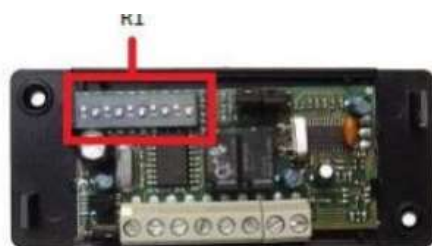


fig 1

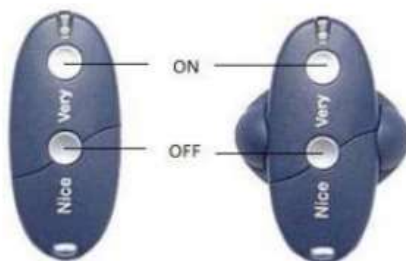


fig 2



Figure 1 - Scan the QR code for Product Information and Coding Video