

CODING SHEET - SMART METAL, DUO & QUATTRO

SMART LIFTER CODING

- 1 - Press CODE until the LED displays a dot.
- 2 - Press a button on the remote, the LED dot will turn off.
- 3 - Release and press the same button again, the dot will flash to confirm the code.
- 4 - Repeat as required to code a maximum of 20 remotes



DELETE CODES

To delete all stored codes, press and hold CODE for 8s until LED dot turns off, all stored codes have now been deleted.

SMART NANO CODING

- 1 - Press the CODE button for 2 seconds the display will show Code Learn.
- 2 - Choose which remote button will operate the door and press that button twice. On the second press the display will show CODE SET.
- 3 - The remote has now been coded.
- 4 - Test the remote, the opener will beep to confirm. Repeat the above steps to code additional transmitters.



DELETE CODES

- 1 - Press and hold the CODE button for 5s.
- 2 - Press MODE button to scroll through until the display shows Del Remote ALL.
- 3 - Press CODE for 3s to delete.



AUXILLARY RECEIVERS

- 1 - Press remote learn button for 1 second, then release. Receiver will give an audio beep and L.E.D will flash to confirm learn mode.
- 2 - Press desired button (I – 4) for channel 1 now press desired button for second channel if needed. Receiver will beep to confirm code learned,
- 3 - If you have more remotes follow the same sequence, every time you code a new remote it extends learn mode by 5 seconds,

DELETE CODES

Press and hold code learn button for 15s. Two audio beeps will sound to confirm all codes have been deleted.