

# LEXO 400 CAPACITY RECEIVER

## Compatibility List:

ACDC Red, Heavy Metal, Clear Case, Green  
ATA PTX4  
Avanti PTX4, TX4, Style, Euro  
Boss HT3 Red Light  
BFT Mitto 2, Mitto 4  
Beninca TWV2 TWV4  
Cenution TX4, Style, New Style  
DEA MIO TR2, MIO TR4, MIO TD2, MIO TD4  
ECA TX4  
ET Doors Red  
FAAC XT4433RC  
Fadini Astro 43-2  
Gibidi Domino Series  
Herculift  
Key Sub44  
Letro AR1  
MHouse GTX4, TX4  
Napoleon Red  
Smart Duo, Quattro  
Steel-Line ZT-07, HT3 Red Light  
Superlift TX4, Style, Euro



## Standard Specs:

Frequency: 433.92MHz  
Coding: Fixed & Rolling Code  
Body Type: Receiver  
Channels: 2  
Button Colour: N/A  
Colour: Grey  
Remote Size: 90x60x20mm  
Range: >40 Meters

## HOW TO CODE YOUR REMOTE

### Code to CHANNEL 1

#### Step 1:

Press the CH1 LEARN button ONCE on the receiver and then release.

*The LED will stay solid.*

**Step 2:** Press the button required on the remote.

*LED will flash 5 times and turn off.*

### Code to CHANNEL 2

#### Step 1:

Press the CH2 LEARN button ONCE on the receiver and then release.

*The LED will stay solid.*

**Step 2:** Press the button required on the remote.

*LED will flash 5 times and turn off.*

## HOW TO DELETE ALL REMOTES

**Step 1:** Hold LEARN button on either channel down.

LED will come on for approximately 5 seconds and then go out.

You have now cleared all remotes from the receiver for that channel. Repeat on other channel if required.

## HOW TO WIRE A 3-WIRE SYSTEM

- 1 - SWITCH = CH1 N/O Terminal
  - 2 - 12/24v POSITIVE = POS Terminal
  - 3 - NEGATIVE = GND Terminal
- Link GND & CH1 COM Terminals

