

# LEXO MULTI 2 CHANNEL RECEIVER

## Compatibility List:

- Chamberlain 4333A
- Chamberlain 4335A
- B&D 4333EBD
- B&D 062170
- B&D EasyLifter 062266
- B&D 062162
- B&D 059116 Black PTX4
- B&D 4332RBD
- Easylifter 062266
- Firmamatic 059739
- Centurion 4333A

## Standard Specs:

Frequency - 280 - 868 MHz  
Coding - Fixed and Rolling Code  
Body Type - Receiver  
Channels - 2  
Button Colour - N/A  
Colour - Beige  
Receiver Size - 50x30x12mm  
Range - >40 Meters



## IMPORTANT NOTE:

Select 12v or 24v AC or DC via the jumper pins located next to the POWER terminals.

Prongs 1 & 2 = 12v

Prongs 2 & 3 = 24v

*8 Dip Switches should be set to 6 & 7 ON*

## HOW TO ENTER REMOTES

- Step 1:** Set 8 x DIP Switches to 6&7 ON  
**Step 2:** Set to either 12V or 24V with the supplied jumpers  
**Step 3:** Press Ch1 or Ch2 LEARN button  
Step 4: Press Button on remote until LED flashes 4 times (generally 3-5 seconds).  
Step 5: Repeat Steps 4&5 for any additional buttons/remotes.

## TERMINAL LOCATIONS

- Left to Right  
1: Power Active  
2: Power Negative  
3: Ch1 NO  
4: Ch1 COM  
5: Ch2 NO  
6: Ch2 COM  
7: Antenna Ground  
8: Antenna

## HOW TO ERASE REMOTES

- Step 1:** Press and Hold Down either LEARN buttons  
LED will flash  
All remotes are now erased from the receiver

## HOW TO MAKE A 3-WIRE SYSTEM

- Active – Negative – Switch Wire  
Install a Link Wire from Negative to Ch1 COM  
Switch wire goes to CH1 NO  
Power Wires as Normal