

CODE EZY KEYPAD

The Code Ezy Keypad MASTER PIN is 0000*

Changing Master Pin

Step 1: Enter Master Pin – There will be one long beep to confirm

Step 2: Press 69# - There will be one short beep to confirm.

Step 3: Enter New Installer Code – There will be one long beep followed by one short beep to confirm.

Assigning a User Pin

Step 1: Enter the master pin

Step 2: Key 01# - There will be one beep to confirm

Step 3: Enter New User 4 digit pin followed by # - There will be one long beep followed by one short beep to confirm.

Copying A Compatible Remote:

Step 1: Enter Master Pin – there will be one long beep to confirm

Step 2: Press 55# - there will be one short beep to confirm

Step 3: Press 01#

Step 4: Keypad will transmit for 10 seconds.

Step 5: Press learn button on the receiver during the transmitting time. Receiver will flash to confirm programmed.

Keypad will turn off after 10 seconds.

