

# CENTSYS NOVA REMOTE

## CODING INSTRUCTIONS

---

Open the receiver housing by inserting a screwdriver into the slot at the base and twisting.

- 1) Locate the "LEARN" pins. With the POWER ON, bridge the two pins with the shunt provided. The red LED will now illuminate.
- 2) Press the required button on the remote you want to open / close the device. The red LED will flash once, indicating that the button has been learned as a momentary button. If the red LED flashes rapidly, the memory is full, and the button cannot be coded.
- 3) If further remotes are to be coded, repeat from step 2. If not, remove the bridge from the "LEARN" pins.

The system is now ready for use

