

# BOSS DIGI-CODE 5040 REMOTE

## CODING INSTRUCTIONS

---

Both of these brands are electronically the same.

MULTI-CODE Switches = UP for ON

DIGI-CODE Switches = DOWN for



### CODING ON MULTI-CODE 3060 & DIGI-CODE 5040

Opening the working remote will reveal a 10 switch bank on the circuit board. Duplicate this sequence exactly Multi-Code to Multi-Code or upside down Multi-Code to Digi-Code.

If no working remote is available look to the receiver on the opener itself - remove the inspection panel to reveal the switch settings. This will mainly be a Multi-code receiver.