

ELSEMA FMT 302 -10 SWITCH REMOTE

CODING INSTRUCTIONS



CODING THE REMOTE – ELSEMA FMT 302

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote

CODING THE RECEIVER – ELSEMA FMT 302

Set the RECEIVER code as per 1-10 on a working ELSEMA remote + switch 11 and 12 as shown. Button A or 1 - Switch 11 is transmitted as “ON” (DIP switch 11 = UP) Button B or 2 - Switch 11 is transmitted as “OFF” (DIP switch 11 = DOWN) BUTTON B code can be changed by cutting the link Wire link is connected - switch 12 is “ON” (DIP switch 12 = ON) Wire link is cut - switch 12 is “OFF” (DIP switch 12 = OFF)



ATA, MAGIC BUTTON & FIRMADOOR TXA1 TO ELSEMA CONVERSION

SINGLE BUTTON remotes can work together if you reverse code in the ELSEMA remote. If TXA1 switch #1 is ON then the ELSEMA switch # 12 is ON, 2 = 11, 3 = 10, 4 = 9, Etc.

EXAMPLE TXA1 CODE SET 4, 6, 7 & 8 ON = ELSEMA CODE SET 5, 6, 7 & 9 ON

PLEASE NOTE: - ELSEMA 2 & 4 button remotes cannot work together with ATA, FIRMADOOR & MAGIC BUTTON 2 & 4 button remotes. To move forward with your openers into the future, you should start again with ELSEMA and recode your receivers to suit.

