

# ELSEMA FMT 302DA -12 SWITCH REMOTE

## CODING INSTRUCTIONS

---



### CODING THE REMOTE – ELSEMA FMT 302DA

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote

### CODING THE RECEIVER – ELSEMA FMT 302DA

Copy the coding sequence in the 2 receivers or match the 12 x DIP switches on a working ELSEMA remote. Channel 1 - (Common Entry) code = switches 1 to 4 coded - with the balance off. Channel 2 - (Private Entry) code = 1 to 4 coded as Ch1 + the balance of switches can be coded to 256 combinations.

### ATA, MAGIC BUTTON & FIRMADOOR TXA1 TO ELSEMA CONVERSION

SINGLE BUTTON remotes can work together if you reverse code in the ELSEMA remote. If TXA1 switch #1 is ON then the ELSEMA switch # 12 is ON, 2 = 11, 3 = 10, 4 = 9, Etc.

**EXAMPLE TXA1 CODE SET 4, 6, 7 & 8 ON = ELSEMA CODE SET 5, 6, 7 & 9 ON**

**PLEASE NOTE: - ELSEMA 2 & 4 button remotes cannot work together with ATA, FIRMADOOR & MAGIC BUTTON 2 & 4 button remotes. To move forward with your openers into the future, you should start again with ELSEMA and recode your receivers to suit.**