

# ELSEMA FMT 304 -10 SWITCH REMOTE

## CODING INSTRUCTIONS

---



### CODING THE REMOTE – ELSEMA FMT 304

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote

### CODING THE RECEIVER – ELSEMA FMT 304

Make sure ALL the first 10 x DIP switches on each RECEIVER matches the first 10 x DIP switches of a working ELSEMA remote + 11 and 12 as per the configuration below.



### ATA, MAGIC BUTTON & FIRMADOOR TXA1 TO ELSEMA CONVERSION

SINGLE BUTTON remotes can work together if you reverse code in the ELSEMA remote. If TXA1 switch #1 is ON then the ELSEMA switch # 12 is ON, 2 = 11, 3 = 10, 4 = 9, Etc.

**EXAMPLE TXA1 CODE SET 4, 6, 7 & 8 ON = ELSEMA CODE SET 5, 6, 7 & 9 ON**

**PLEASE NOTE:** - ELSEMA 2 & 4 button remotes cannot work together with ATA, FIRMADOOR & MAGIC BUTTON 2 & 4 button remotes. To move forward with your openers into the future, you should start again with ELSEMA and recode your receivers to suit.

#### EXAMPLE

