

# ELSEMA KEY 302DA -12 SWITCH REMOTE

## CODING INSTRUCTIONS

---

### CODING THE REMOTE – ELSEMA KEY 302DA

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote



### CODING THE RECEIVER – ELSEMA KEY 302DA

Copy the coding sequence in the 2 receivers or match the 12 x DIP switches on a working ELSEMA remote. Channel 1 - (Common Entry) code = switches 1 to 4 coded - with the balance off. Channel 2 - (Private Entry) code = 1 to 4 coded as Ch1 + the balance of switches can be coded to 256 combinations.