

ELSEMA KEY 304 -10 SWITCH REMOTE

CODING INSTRUCTIONS

CODING THE REMOTE – ELSEMA KEY 304

Copy the coding sequence in the 2 or 4 receivers or match the 10 or 12 DIP switches on a working ELSEMA remote



CODING THE RECEIVER – ELSEMA KEY 304

Make sure ALL the first 10 x DIP switches on each RECEIVER matches the first 10 x DIP switches of a working ELSEMA remote + 11 and 12 as per the configuration below.

