

CODE EZY OPTIMA REMOTE

CODING INSTRUCTIONS

CODING YOUR REMOTE

1. Press and release the "LEARN" button on the opener. The learn indicator light will glow steadily for 30 seconds
2. Within 30 seconds, press and hold the button on the remote that you wish to operate your garage door
3. Release the button when the opener light blinks. It has learned the code. If the light bulb is not installed, two clicks will be heard.



DELETING CODES

To deactivate any unwanted transmitter, first erase all codes:

Press and hold the "LEARN" button on opener until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased.



CODING INSTRUCTIONS FOR MERLIN+ C945 REMOTE

www.retroremotes.com.au

0417223200