

CODE EZY SONIC REMOTE

CODING INSTRUCTIONS

LOCATE THE “LEARN” BUTTON

SECTIONAL / TILT DOORS - Model No. SDO V8 / V8E (blue colour), V10E (Silver colour): on the Control Panel of the opener.

ROLLER DOORS - Model No. RDO V10: on the control Panel of the opener. Model No. RDO V12: slide down the light cover on the bottom of the opener to reveal the control panel.



LEARN button here is a small round LED or red Dot above the word “Learn”.

CODE YOUR REMOTE

1. Press LEARN button once and the LED will glow RED
2. Press the remote button that you want to code TWICE. The 1st pressing will switch off the LED and the 2nd one will make it flash.
3. Wait for the flashing LED to stop - the remote has been programmed.

DELETE CODES

Press and hold LEARN button (for 8 seconds), the LED will switch to RED. The Red LED will be OFF after 8 seconds and it indicates that all previously coded remotes have been erased